

9XR Pro Menu Structure (Ersky9x version r214 and up)

Home Pages	
<p><i>Home Page 1 (Stick and Pot Positions)</i></p> <p><i>Home Page 2 (Graphic Servo Outputs)</i></p> <p><i>Home Page 3 (Numeric Servo Outputs)</i></p> <p><i>Home Page 4 (Timers)</i></p> <p><i>Home Page 5 (Telemetry Series)</i></p> <p><i>Statistics Screens</i></p> <ol style="list-style-type: none"> 1. Battery Screen 2. STAT Screen 3. STAT2 Screen 	
Radio Setup	
<p><i>Display (Screen)</i></p> <ul style="list-style-type: none"> Contrast Brightness Light Switch Light on Key Light on Stick Movement Flash on Beep <p><i>Audio/Haptic</i></p> <ul style="list-style-type: none"> Volume (Beeps) Beeper (Duration) Beep Countdown (BeepVoice - last minute) Minute Beep (Beep or Voice each minute)) Speaker Pitch Haptic Strength (Vibration) Haptic Min Run <p><i>Alarms</i></p> <ul style="list-style-type: none"> Battery Warning (TxBattery Voltage) Inactivity Alarm (Transmitter) Capacity Alarm (Transmitter Battery) Throttle Warning (Stick not at idle) Alarm Warning (No Beeper) Internal FrSky Alarm (Turn off) 	<p><i>General</i></p> <ul style="list-style-type: none"> Name (Radio Owner) Language Splash Screen Splash Name Scrolling (Pot/Stick) Bt Baudrate (Blue Tooth) <p><i>Controls</i></p> <ul style="list-style-type: none"> Channel Order Cross Trim Throttle Reverse (Stick UP for Idle) Mode (Stick Mode) Stick Reverse (Stick Replacement only) Stick Names (Renaming Sticks) <p><i>Hardware</i></p> <ul style="list-style-type: none"> Filter ADC (Analog to Digital Conversion) Rotary Divisor (Rotary Encoder) Stick Gain (Stick mods) Switch Types (Switch mods) <p><i>Calibration (Sticks and Pots)</i></p> <p><i>Trainer (Master Setup)</i></p> <p><i>Version (Firmware)</i></p> <p><i>FrSky xSSI (Module Warning Beeps)</i></p> <p><i>Date-Time</i></p> <p><i>DiagSwtch (Diagnostics - Switches)</i></p> <p><i>DiagAna (Diagnostics - Analog)</i></p>

Model Select

Model Setup

Mixer

Source
Weight
Offset
Fix Offset
EnableExpoDr
Trim
Curve
Switch
Warning
Mltpx (Multiplex)
Modes
Warning
Delay Down/Up
Slow Down/Up

Templates

Heli

Swash
Collective
Swash Ring
ELE/AIL/COL Direction

Modes (Flight Modes)

Expo/DR (Exponential and Dual-Rate)

Limits

Curves

Logical Switches

Blue Tooth (Options)

Safety and Voice Switches

Safety Switches
Voice Switches

Globals

GVARs
Scalers

Telemetry

Telemetry 1
Telemetry 2
Telemetry 2 Custom Display
Telemetry 2 (Page 3)
Telemetry 2 (Page 4)

Voice (Voice Alarms)

General

Name (Model Name)
Voice (Model Name)
T-Trim (Throttle Trim)
T-Expo (Throttle Expo)
Trim Inc (Trim Increments)
Trim Switch ("InstaTrim")
E. Limits (Extended Limits)
Throttle Reverse (Stick UP for idle)
Throttle Default (Throttle closed at End or Center)
Auto Limits (Subtrim overrides Limits)
Switch Warning (Switch not in default position – on/off)
Default Switch (Set Switch Default Positions)
Volume Control
Trainer (Allows inputs from Slave Tx)
Beep Cnt (Beep Centre)

Protocol (for RF Module)

PPM2 Start Channel
PPM2 Channels (Number of channels sent)
PPM Protocol
PXX Protocol
DSM2 Protocol